



PTPS03W

Sun/wind sensor for awnings User manual



1. SAFETY TIPS

Warning: Important safety instructions for people. READ CAREFULLY when you see this symbol ⚠

This product must only be used for its intended purpose. Any other use is dangerous. Follow all instructions as improper installation may result in serious bodily injury. Keep these warnings together with the installation and operation manuals that come with the device.

Always cut off the power before performing any intervention

Always double check the system is properly connected to the earth

Installation must be carried out by expert qualified personnel who knows the potential hazards associated and must fully comply with the outstanding current regulations. Use of the product must be restricted to its intended use. Any other use is to be considered dangerous and therefore forbidden.

Do not allow children to play with the fixed command devices. Keep any remote control devices (i.e. transmitters) away from children to prevent the system from being accidentally activated.

Keep the system regularly maintained. Use only Proteco's original spares. Users are strictly forbidden to carry out any changes on the system. Proteco Srl is not liable for any damage resulting from improper, wrongful or unreasonable use.

2. TECHNICAL FEATURES


Power source
Absorption
Code type

solar energy + Lithium battery 3.7V, 180mAh
<=12mA
rolling code



Frequency
Working temperature
Protection Class

433.92 MHz
-20 °C < +60 °C
IP44


3. DESCRIPTION

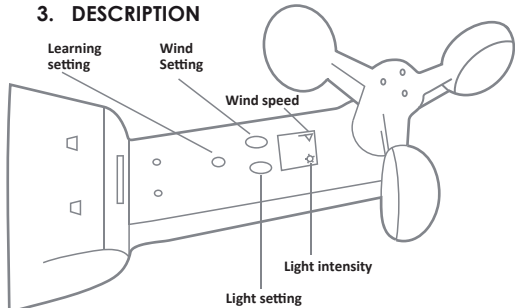

4. DIMENSIONS

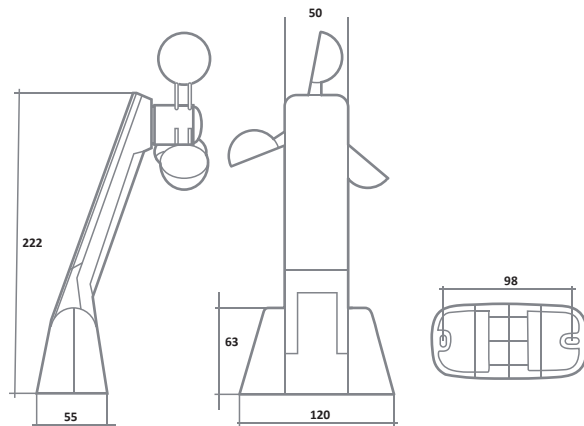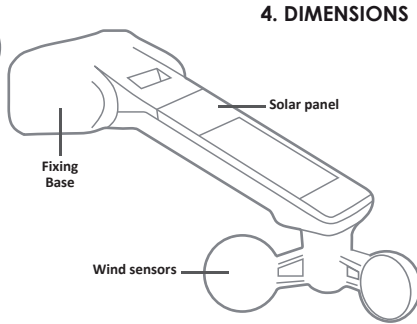

5. INSTALLATION

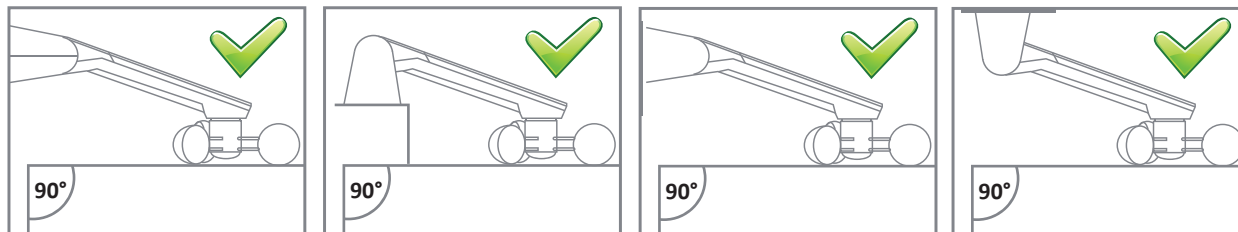

So that the system works properly the device shall be installed in a sheltered area near the awning, where it is possible to monitor the light intensity as well as the wind speed. Make sure there are no other devices with the same frequency (433,92 MHz) nearby so as not to cause interferences. Use the provided material, paying special attention to the position (see here above) so as not to invalidate the wind speed values.

6. RADIO CODE LEARNING



Powering the control panel, the motor makes a quick vibration and goes automatically to learning mode.

Briefly press the learning key

The motor makes a one vibration, the radio code has been successfully stored.

7. WIND SPEED SETTING



Press wind speed key for 2 seconds, left hand figures on the LCD screen start blinking


Briefly press the speed key, a numbering from 0 to 5 is displayed

Set the value according to the wind speed (see the table hereby), press once the right key to confirm. Figures stop blinking and the setting is successfully stored

Ratio between wind speed level and wind speed in real time

Speed level	Speed in real time
0	OFF
1	10Km/h
2	15Km/h
3	20Km/h
4	30Km/h
5	>40Km/h

 8. LIGHT INTENSITY SETTING



Press light intensity key for 2 seconds, right hand figures on the LCD screen start blinking

Briefly press the light intensity key, a numbering from 0 to 9 is displayed


Set the value according to the light intensity (see the table hereby), press once the left key to confirm. Figures stop blinking and the setting is successfully stored

Ratio between light level and light intensity in real time

Light level	Light intensity	Light level	Light intensity
0	OFF	5	4000Lux
1	2000Lux	6	6000Lux
2	5000Lux	7	7000Lux
3	10000Lux	8	8000Lux
4	20000Lux	9	9000Lux


9. WIND SPEED CHECK

When the sensor is measuring real-time wind speed, the speed value shall appear on the LCD screen.
Ex.: value "1.0" reads a real 10Km/h external wind speed.

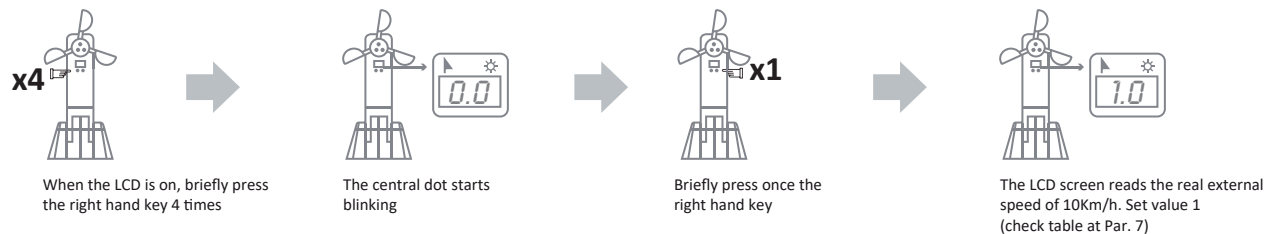

10. LIGHT INTENSITY CHECK

When the sensor is measuring real-time light, the intensity value shall appear on the LCD screen. Ex.: picture "10" reads a real intensity of 10000Lux

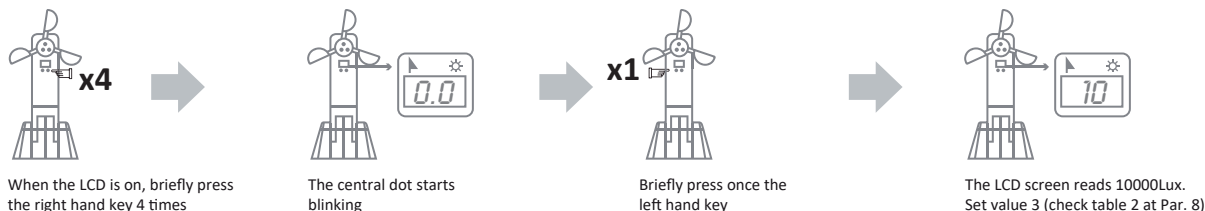

NB. Se il display indica "00" l'intensità luminosa è <1000Lux, se appare "99", l'intensità sarà superiore ai 10000Lux.
Dopo 3 minuti di inattività, il display torna in stand-by.

11. OPERATION

1 WIND MODE: INTENSE WIND PROTECTION



If wind speed exceeds the set value for 6 consecutive seconds, a closing command is given to immediately retract the awning.

 


As long as the speed wind exceeds the set value, there is no way to open the awning (manual operation, transmitters and sensors are deactivated)



If wind speed drops for 30 seconds below the set value, the sensor gives an opening signal to the system, and it is possible to open the awning using transmitters or through the sensor itself.

2 SUN MODE



If the light intensity exceeds the set value for 10 consecutive minutes, an opening command is given to immediately open the awning



If the light intensity drops below the set value for 10 consecutive minutes, a closing command is given to immediately retract the awning

12. COMPLIANCE DECLARATION

Proteco Srl declares the sun/wind sensor PTPS03W complies with the essential requirements of RED 2014/53/CE for its intended use and LVD 2014/35/CE.

Castagnito, 3 ottobre 2016

Marco Gallo
Managing Director